

	Function	Options
1	Automatic film rewind at the end of film roll	Ⓐ: Activated (initial setting) Ⓛ: Disabled
2	Reset to DX film speed setting for new film	Ⓐ: Activated (initial setting) Ⓛ: Disabled
3	Bracketing order	Ⓐ: Metered value, under, over (initial setting) Ⓛ: Under, metered value, over
4	On-Demand Grid Lines superimposition display	Ⓐ: Not displayed (initial setting) Ⓛ: Displayed
5	Illumination for superimposition	Ⓐ: Automatically illuminated for low light (initial setting) Ⓛ: Cancelled 2: Always illuminated
6	Focus area selection	Ⓐ: Normal selection (initial setting) Ⓛ: Enables successive rotation of focus area selection
7	Auto Exposure Lock when shutter release button is lightly pressed	Ⓐ: Disabled (initial setting) Ⓛ: Activated
8	Auto film loading when camera back is closed	Ⓐ: Enabled (initial setting) Ⓛ: Disabled
9	Closest-subject-priority Dynamic AF in Single Servo AF	Ⓐ: Enabled (initial setting) Ⓛ: Disabled
10	Closest-subject-priority Dynamic AF in Continuous Servo AF	Ⓐ: Disabled (initial setting) Ⓛ: Enabled
11	AE-L/AF-L button	Ⓐ: AE/AF simultaneous lock (initial setting) Ⓛ: Auto Exposure lock only 2: Autofocus lock only 3: Auto Exposure lock (remains locked until button is pressed again) 4: AF operation only starts by pressing AE-L/AF-L button

	Function	Options
12	Command Dial functions	0: Main-Command Dial for shutter speed; Sub-Command Dial for aperture setting (initial setting) 1: Main-Command Dial for aperture; Sub-Command Dial for shutter speed setting
13	Film rewind	0: High-speed film rewind (initial setting) 1: Quiet film rewind
14	Multiple exposure	0: Single shutter release operation (Initial setting) 1: Continuous shutter release operation
15	Time delay for auto meter-switch-off	4: 4 sec. 6: 6 sec. (initial setting) 8: 8 sec. 16: 16 sec.
16	Self-timer duration	2: 2 sec. 5: 5 sec. 10: 10 sec. (initial setting) 20: 20 sec.
17	LCD illuminates by pressing any function button	0: Disabled (initial setting) 1: Activated
18	AF-Assist Illuminator activation	0: Activated (initial setting) 1: Disabled
19	ISO film speed setting for data imprint between frames	0: Automatically (initial setting) 1: Under ISO 25 2: ISO 32-80 3: ISO 100 4: ISO 125-200 5: Over ISO 250